 
 


Meilan S3 Bicycle Wireless Remote Control Electric Bell User Manual


Product Appearance and Installation method:

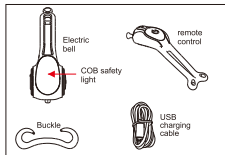

Installation of the remote control




Mounted on the front handle

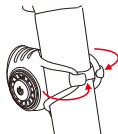

Mounted on the vehicle tube

You can easily install this product anywhere on your bike/E-Bike.

Buttons/Interfaces Functions:

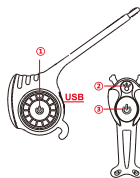

Taillight button	
①	Short press: bell ringing ; Continuous double tap: switch the sound type; Long press: power switch.
Remote control button	
②	Short press: lighting control: turn on the light - adjust the brightness of the light - turn off the light; Long press: anti-theft function is enabled, S3 automatically shuts down, enters the anti-theft mode; Bell is intermittent 5 sounds: Bababa..., reminder, the remote control red light is always on for 5 seconds to remind;
④	When the anti-theft function is enabled, it is only valid during one shutdown period. If you need to activate the anti-theft function next time, you need to reset it again. When the power of S3 is turned on again, the anti-theft function will be automatically released; when the anti-theft function is released: the bell file continues Sound: bababa...Reminder, the green light of the remote control is always on for 5 seconds;
③	Short press: the bell rings once; Continuous double click: switch the sound type; Long press: power switch

Remote Control Battery Replacement and Charging

When the button on the surface of the remote control is pressed, if the indicator light on the remote control does not switch on or the wireless transmission has no effect, the remote control battery should be replaced at this time; S3 uses a 1220 button battery, and the replacement method is as follows:



1. Remove the silicone case as shown (remove it first, then take it)



2. Separate the case with your fingers



3. Remove the battery



4. Input the new battery (please note the positive and negative polarity of the battery)

When the S3 battery is too low to stop working, the tail light will emit: Dadada... sound to remind when charging, the light flashes slowly, and when it is full, it turns off automatically.

Product parameters

Input: DC 5V, 500 mah
 Battery capacity: 400MAH
 Brightness: 20Lux
 Wireless working frequency band: 433MHz
 The use of ambient temperature: -10 - +40 °C
 Waterproof Grade: IPX5.

INFORM:

- With the remote control to turn off the electric bell power or anti-theft function is enabled, S3 is actually still being under operation; there is a certain amount of power consumption, if the power is sufficient, the standby should be about 2 days; when the power consumption is completed S3 will close completely, please pay attention to the power or pay attention to the anti-theft of the bicycle;
- Do not put the waste battery into the water or uncontrolled natural environment; do not place the product on fire or in an ultra-high temperature environment.
- If the product is not used continuously for six months, please charge it at least once, otherwise it may affect your use.
- This product is suitable for use in small to medium rain. Do not use the product in heavy rain or soak in water. The damage caused by not right method of use will be afforded by the consumer.
- This product involves the radio frequency part which is developed in accordance with the European Union EN300328 standard. Please follow the local radio management regulations when using in other countries and regions.
- This product may not work properly in a strong radio frequency interference environment.

About After Sales:

- The quality of the products sold by the official dealers authorized by **MEILAN** will be replaced by new ones within one year.
- Accessories and connectors are not covered by the warranty.
- Damage caused by abnormal use is not covered by the warranty.
- Self-disassembly, repair, modification of the product is not covered by the warranty.